


## CO-2050 Wind-sun Sensor Instruction

Version: A/00

### Product Features

Note: 1,Pls make sure that the wind-sun sensor have been paired to the receiver.  
2,pls make sure when press UP button, the awning will be retracted.

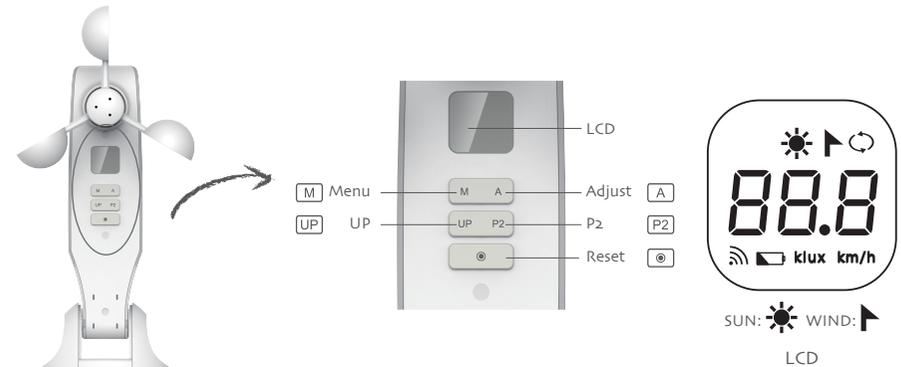

### Technical specification


|  |   |                        |
|--|---|------------------------|
| Working voltage: DC 3.7V                                     | Working temperature: -10°C~+60°C                    | Working current: <20mA |
| Radio frequency: 433.05~434.79MHZ                            | Radio range: outdoor >100 meters, indoor >40 meters |                        |
| Safety code (50 million times without repeat, high security) |   |                        |

### Warning

- 1, Stable performance, wireless remote control, solar powered, Type-C charging.
- 2, Check the voltage once a day. When the voltage is lower than 2.7V, a small battery icon is displayed to indicate low voltage.
- 3, The sensor can be fixed to the wall with two screws.
- 4, Adjustable wind intensity range: 0~180Km/h; sunlight intensity range: 0~100Klux.
- 5, Once the wind intensity exceeds the setting level, the sensor will send signals to the motor automatically to close the awning within 3s.
- 6, When the sunlight intensity exceeds the setting level continuously more than 2 minutes, the sensor will send signals to open the awning and will not detect the sunlight intensity within 15 minutes; when the sunlight intensity hasn't less than the setting level continuously more than 15 minutes, the sensor will send signals to close the awning.
- 7, The LCD display screen will be ON for 30s. The LCD screen will turn off after 30s without any press while the programming keeps running at the background; Press any button(except reset button) to turn on the LCD screen for 30s.

### Matchable Motors And Emitters


#### Uni-directional mode

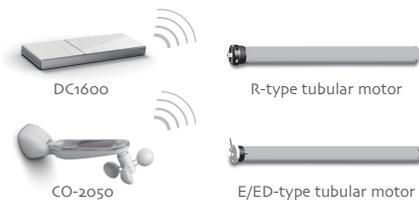

#### Bi-directional mode



## Matchable Receivers

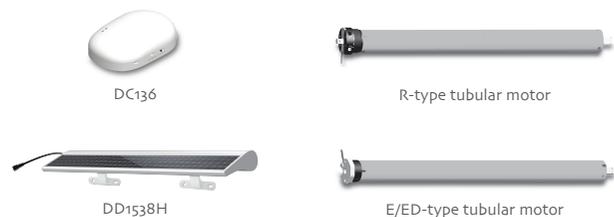


## Wind-sun Sensor Working Principle



## Correct Installation Method


Note: Installation must keep the fun blades at the horizontal level ( as below picture).

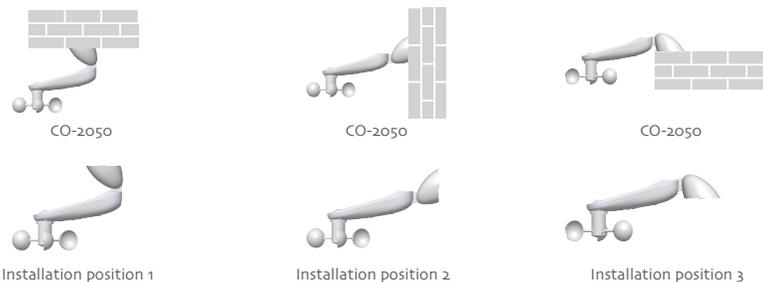

## View The Data Of Wind-sun Sensor



## Checking The Setting Level Of Wind-sun Sensor

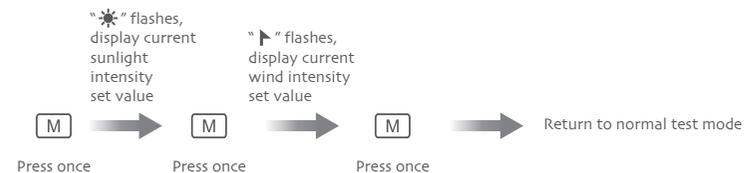

## Setting The Wind And Sun Intensity Level

Note: 1, Long press (A) the decimal value will decrease faster, long press (UP) will increase faster.  
 2, Under the setting status, the corresponding setting value will flash, press (A) to change the setting value.  
 3, Under the setting status, if there is no any operation within 10S, the display will return to normal.

