




Effective Timer Channel Selection (Non Group Control)

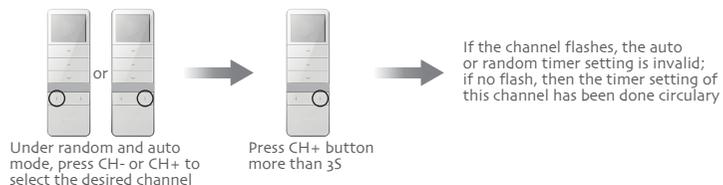

CO-2010 5-channel Timer Emitter Instruction

Version: A/00

Instruction Of Buttons

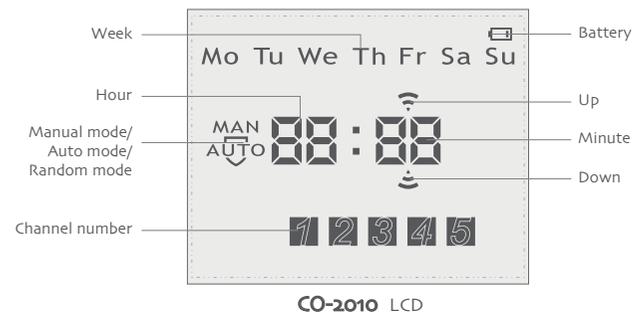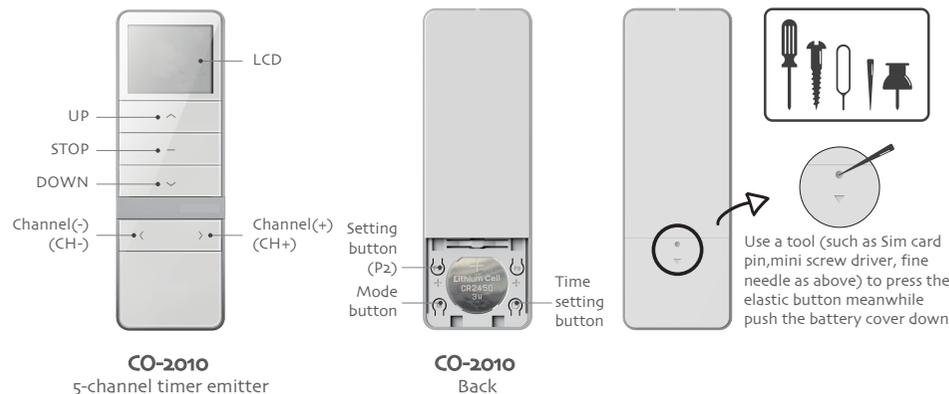

Technical specification


Battery: 3V (CR2450)	Battery life: >2 years	Radio frequency: 433.05~434.79MHz
Working temperature: -10°C~50°C	Transmitting power: 25 mW	Radio range: 200 meters outdoor, 35 meters indoor

Warning

- 1, Emitter couldn't expose to moisture or be struck heavily, or else the emitter life will be affected.
- 2, If the emitter is not so sensitive or the radio range becomes shorter, pls check whether to change the battery.
- 3, If the voltage is less than 2.6V, there will be a low voltage indication.
- 4, Under uni-directional mode, if you press any button more than 20S, while under bi-directional mode, you press any button 5S, the emitter will stop sending radio signals.
- 5, It's forbidden to use different type battery to avoid any dangerous risk.
- 6, Dispose of used batteries properly.



Uni-directional / Bi-directional Mode Switch

Note: 1,The operation is available in any mode. 2,The factory default mode is Bi-directional mode, repeat the same operation to switch the mode circularly.

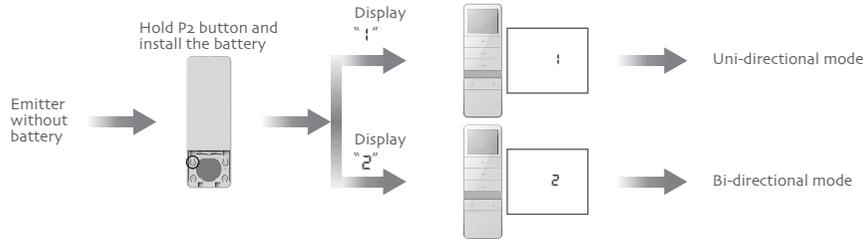


Combination Button Lock / Unlock Operation

Note: 1,The operation is available in any mode. 2,The factory default is unlock status, repeat same operation to switch status circularly. 3,Under lock status, the combination buttons don't work; Under unlock status, the combination buttons will work normally. 4,Only the transmitting code will be affected if the combination buttons are locked. 5,If there is no operation for 10 seconds, it will automatically exit the setting status.

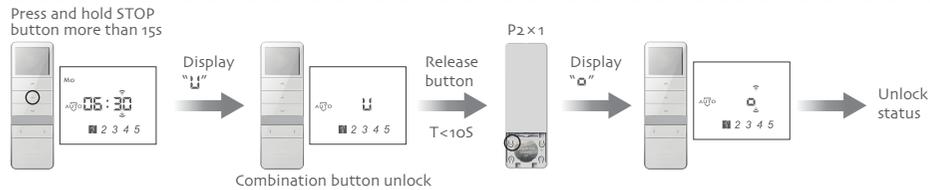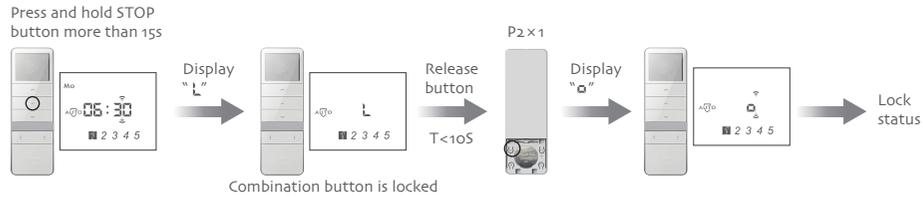



Mode Switch

Note: 1,Manual Mode(MAN): only manual control; Auto Mode(AUTO): manual control and timer control; Random Mode (AUTO): manual control and random ±15mins control. 2,Under Auto or Random mode, press the mode button more than 25 to check the timer method.

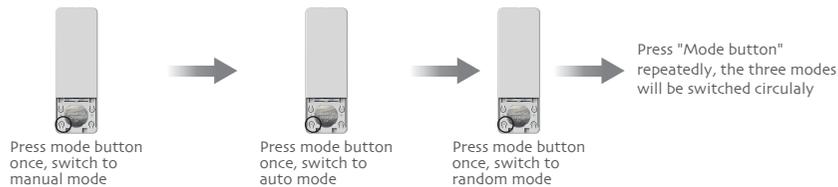

Current Time Setting (Only Manual Mode)

Note: 1,During the setting status, every operation should be less than 60s, or else, it will exit the setting and back to original status. 2,Press STOP button shortly, it will exit setting and save nothing. 3,The maximum error between current time and Beijing time is ±2s per day.

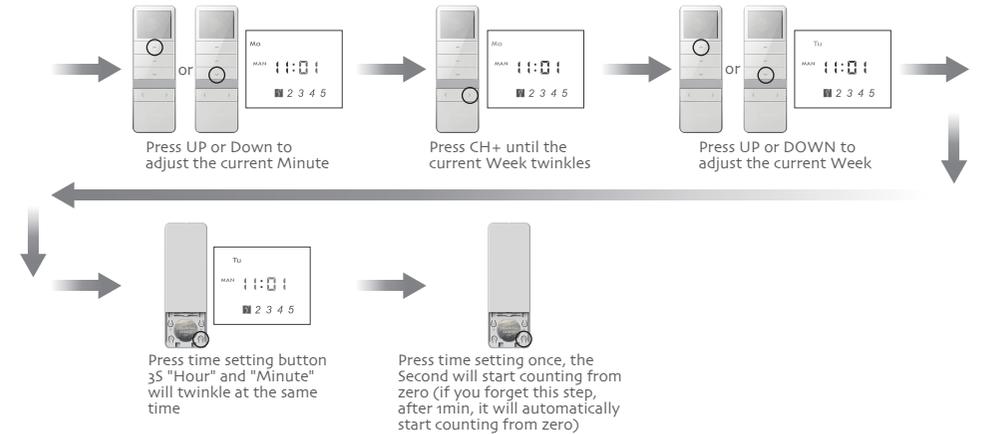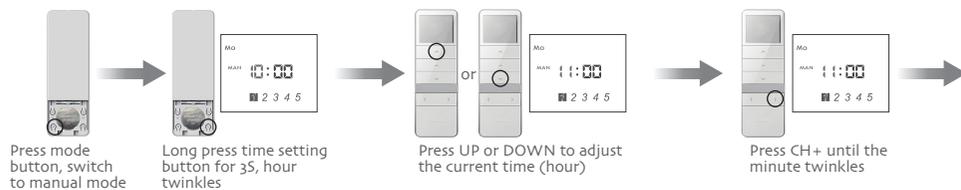

Timer Check And Setting (Non Group Control)

Note: 1,If the timer shows "--:--", means this channel no timer at the UP or DOWN direction. 2,During the setting status, every operation should be less than 60s, or else, it will exit the setting and back to original status. 3,After finishing the timer setting, even there is no power, the memory won't lose. 4,The timer setting under group control or non group control status is the same operation, if under group control status, the timer will be effective for all the channels. 5,Three timer method: Method 1(SUN twinkles) the timer of every day can be set independently; Method 2 (Mo~SUN twinkles) the timer from Monday to Sunday will be the same; Method 3 (Mo~FRI twinkles) weekday and weekend (Saturday and Sunday) independent timer. 6,Every channel can set the independent timer separately. 7,Under the timer setting status Method 1 and Method 3, press mode button once, can switch to next timer setting of UP direction. 8,Under the setting status, press STOP button to exit and setting without saving the setting. 9,After you finish the timer setting, other timer methods will be cleared.

