7 Circut installation C

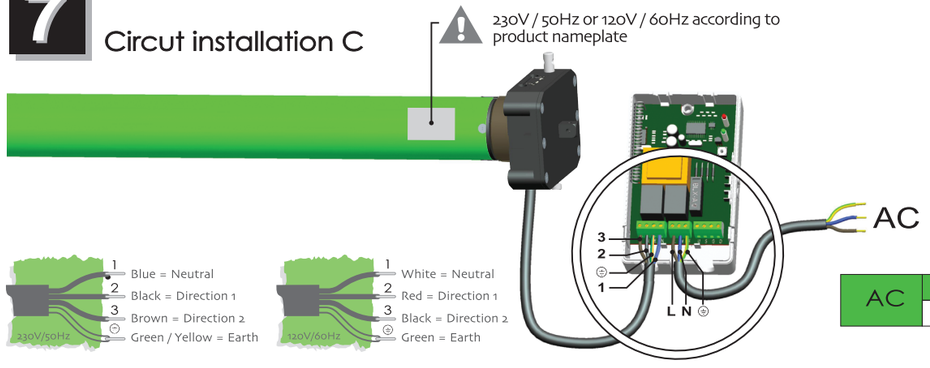

AC	L	N	⏚
	Direction	Neutral	Earth

8 Up limit setting

When motor doesn't work stop rotating red or white worm with regulator.

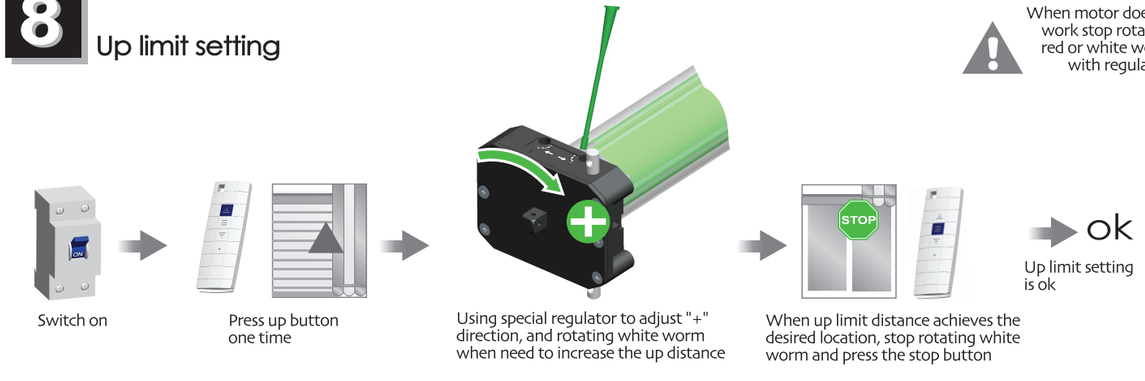

9 Down limit setting

When motor doesn't work stop rotating red or white worm with regulator.

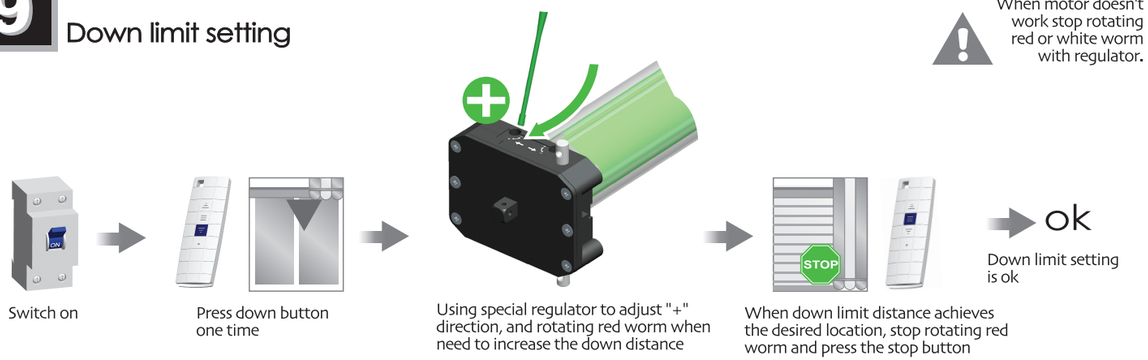

Attention

Common failures and solutions

	Fail-phenomena	Failure causes	solutions failure recovery
1	Press the upward button of the controller, the shutter move downward	Inside wire connecting of the controller is wrong	Exchange the position of black wire and brown wire
2	Switch on, the drive adapter runs in one-way operation	Inside limit switch of motor doesn't open	Crown running one circle in the opposite directionof the drive adapter, then it works
3	motor starts slowly or not work after connect power	a. Power voltage is slow b. Wiring error c. Overload d. Improper installation	a. Adjust power to rated data b. Check circut and correct wiring connecting c. Rated torque associated with the installation of the load d. Re-install the motor
4	Motor stops suddenly after running	Motor stops suddenly after running	Motor will automatically resume work after 20 minutes cooling
5	Abnormal sound during roller blinds in operation	Outer tube is too long, led the rolling shutter connects with both sides of bracket too tightly	If idler is active, propering make the tube shorter to avoid too tight status.

Manual Tubular Motor Specification

TALIUS

AC TUBULAR MOTOR

M: Manual
Mechanic Limit + Manual

By MO-2025
MO-2050

Version No.: A/00

Technical Support

Product Nameplate

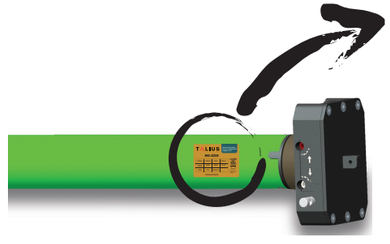

Technical Support

Instruction Of The Motor

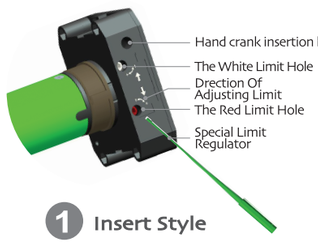

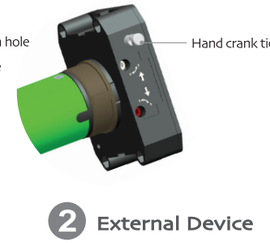

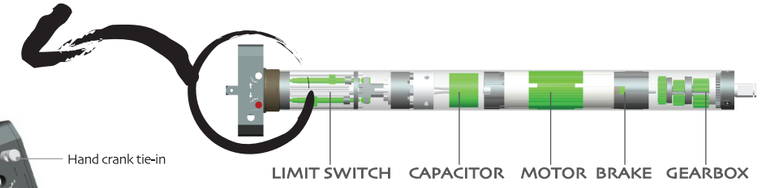

Hand crank accessories equipment

Technical Support

Matchable Control System

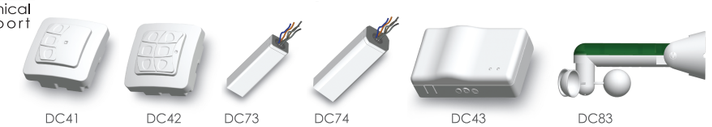

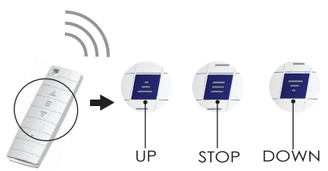

- Emitter Frequency: 433 .92MHz ± 100KHz
- Work temperature: – 20°C ~ + 55°C
- light-touch
- dot-move
- direction-converse function
- Transmit Distance : outdoor 200 meters
  indoor 35 meters

Other Control System

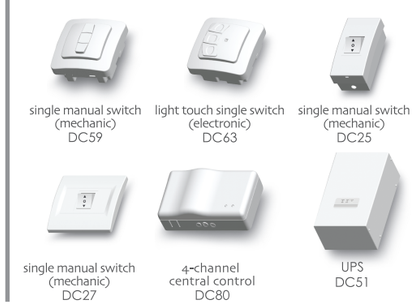

Attention

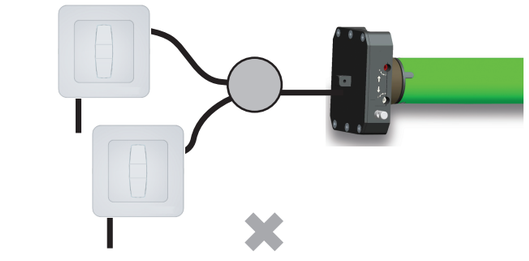

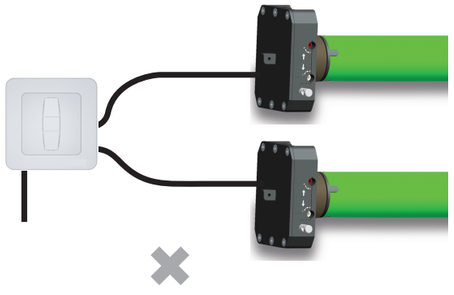

1 Crown installation

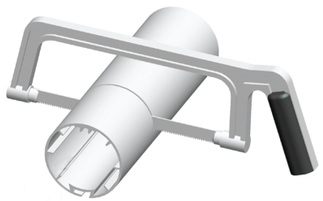

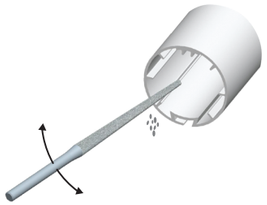

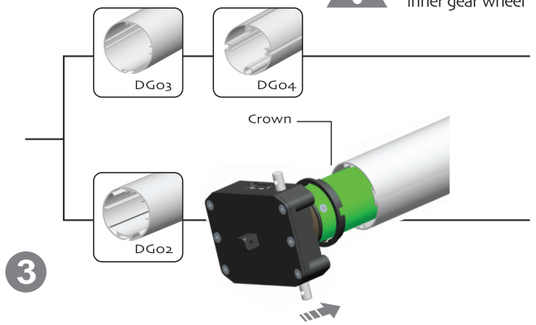

2 Drive adapter installation

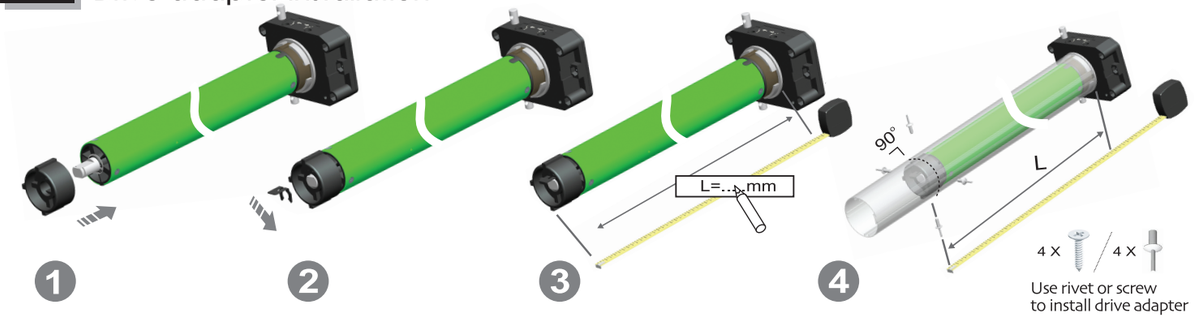

3 Bracket installation A

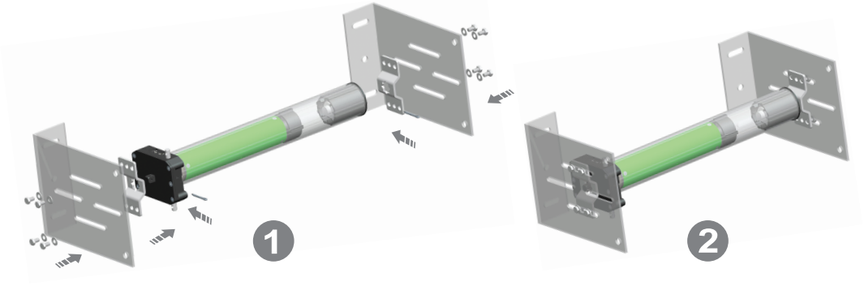

4 Bracket installation B

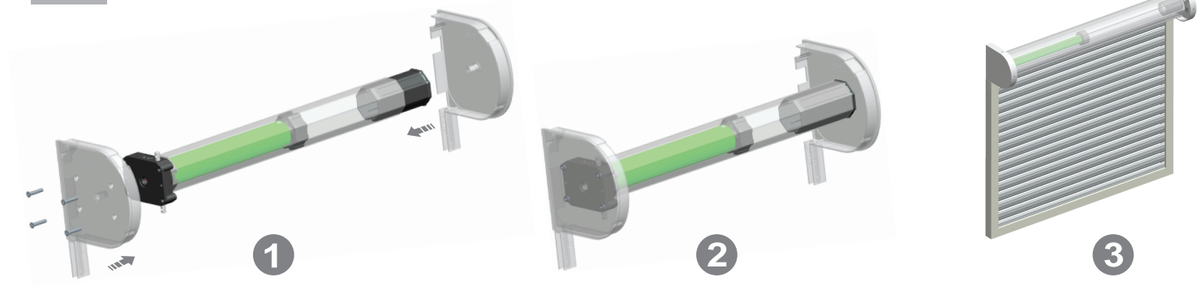

5 Circut installation A

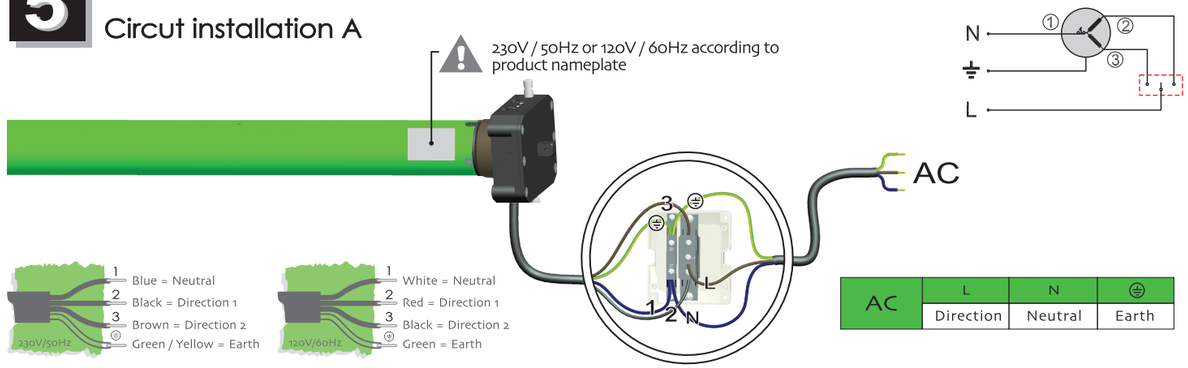

AC	L	N	⏚
	Direction	Neutral	Earth

6 Circut installation B

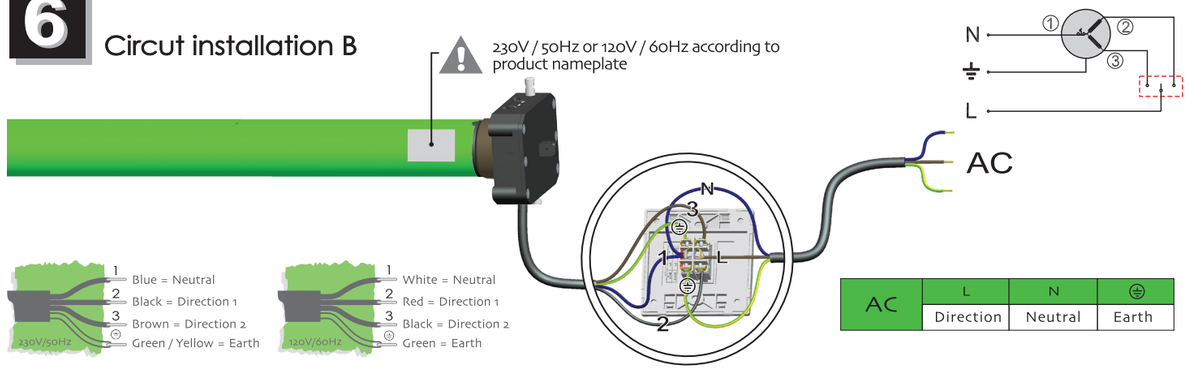

AC	L	N	⏚
	Direction	Neutral	Earth